




40

Edition 20070307-20081209

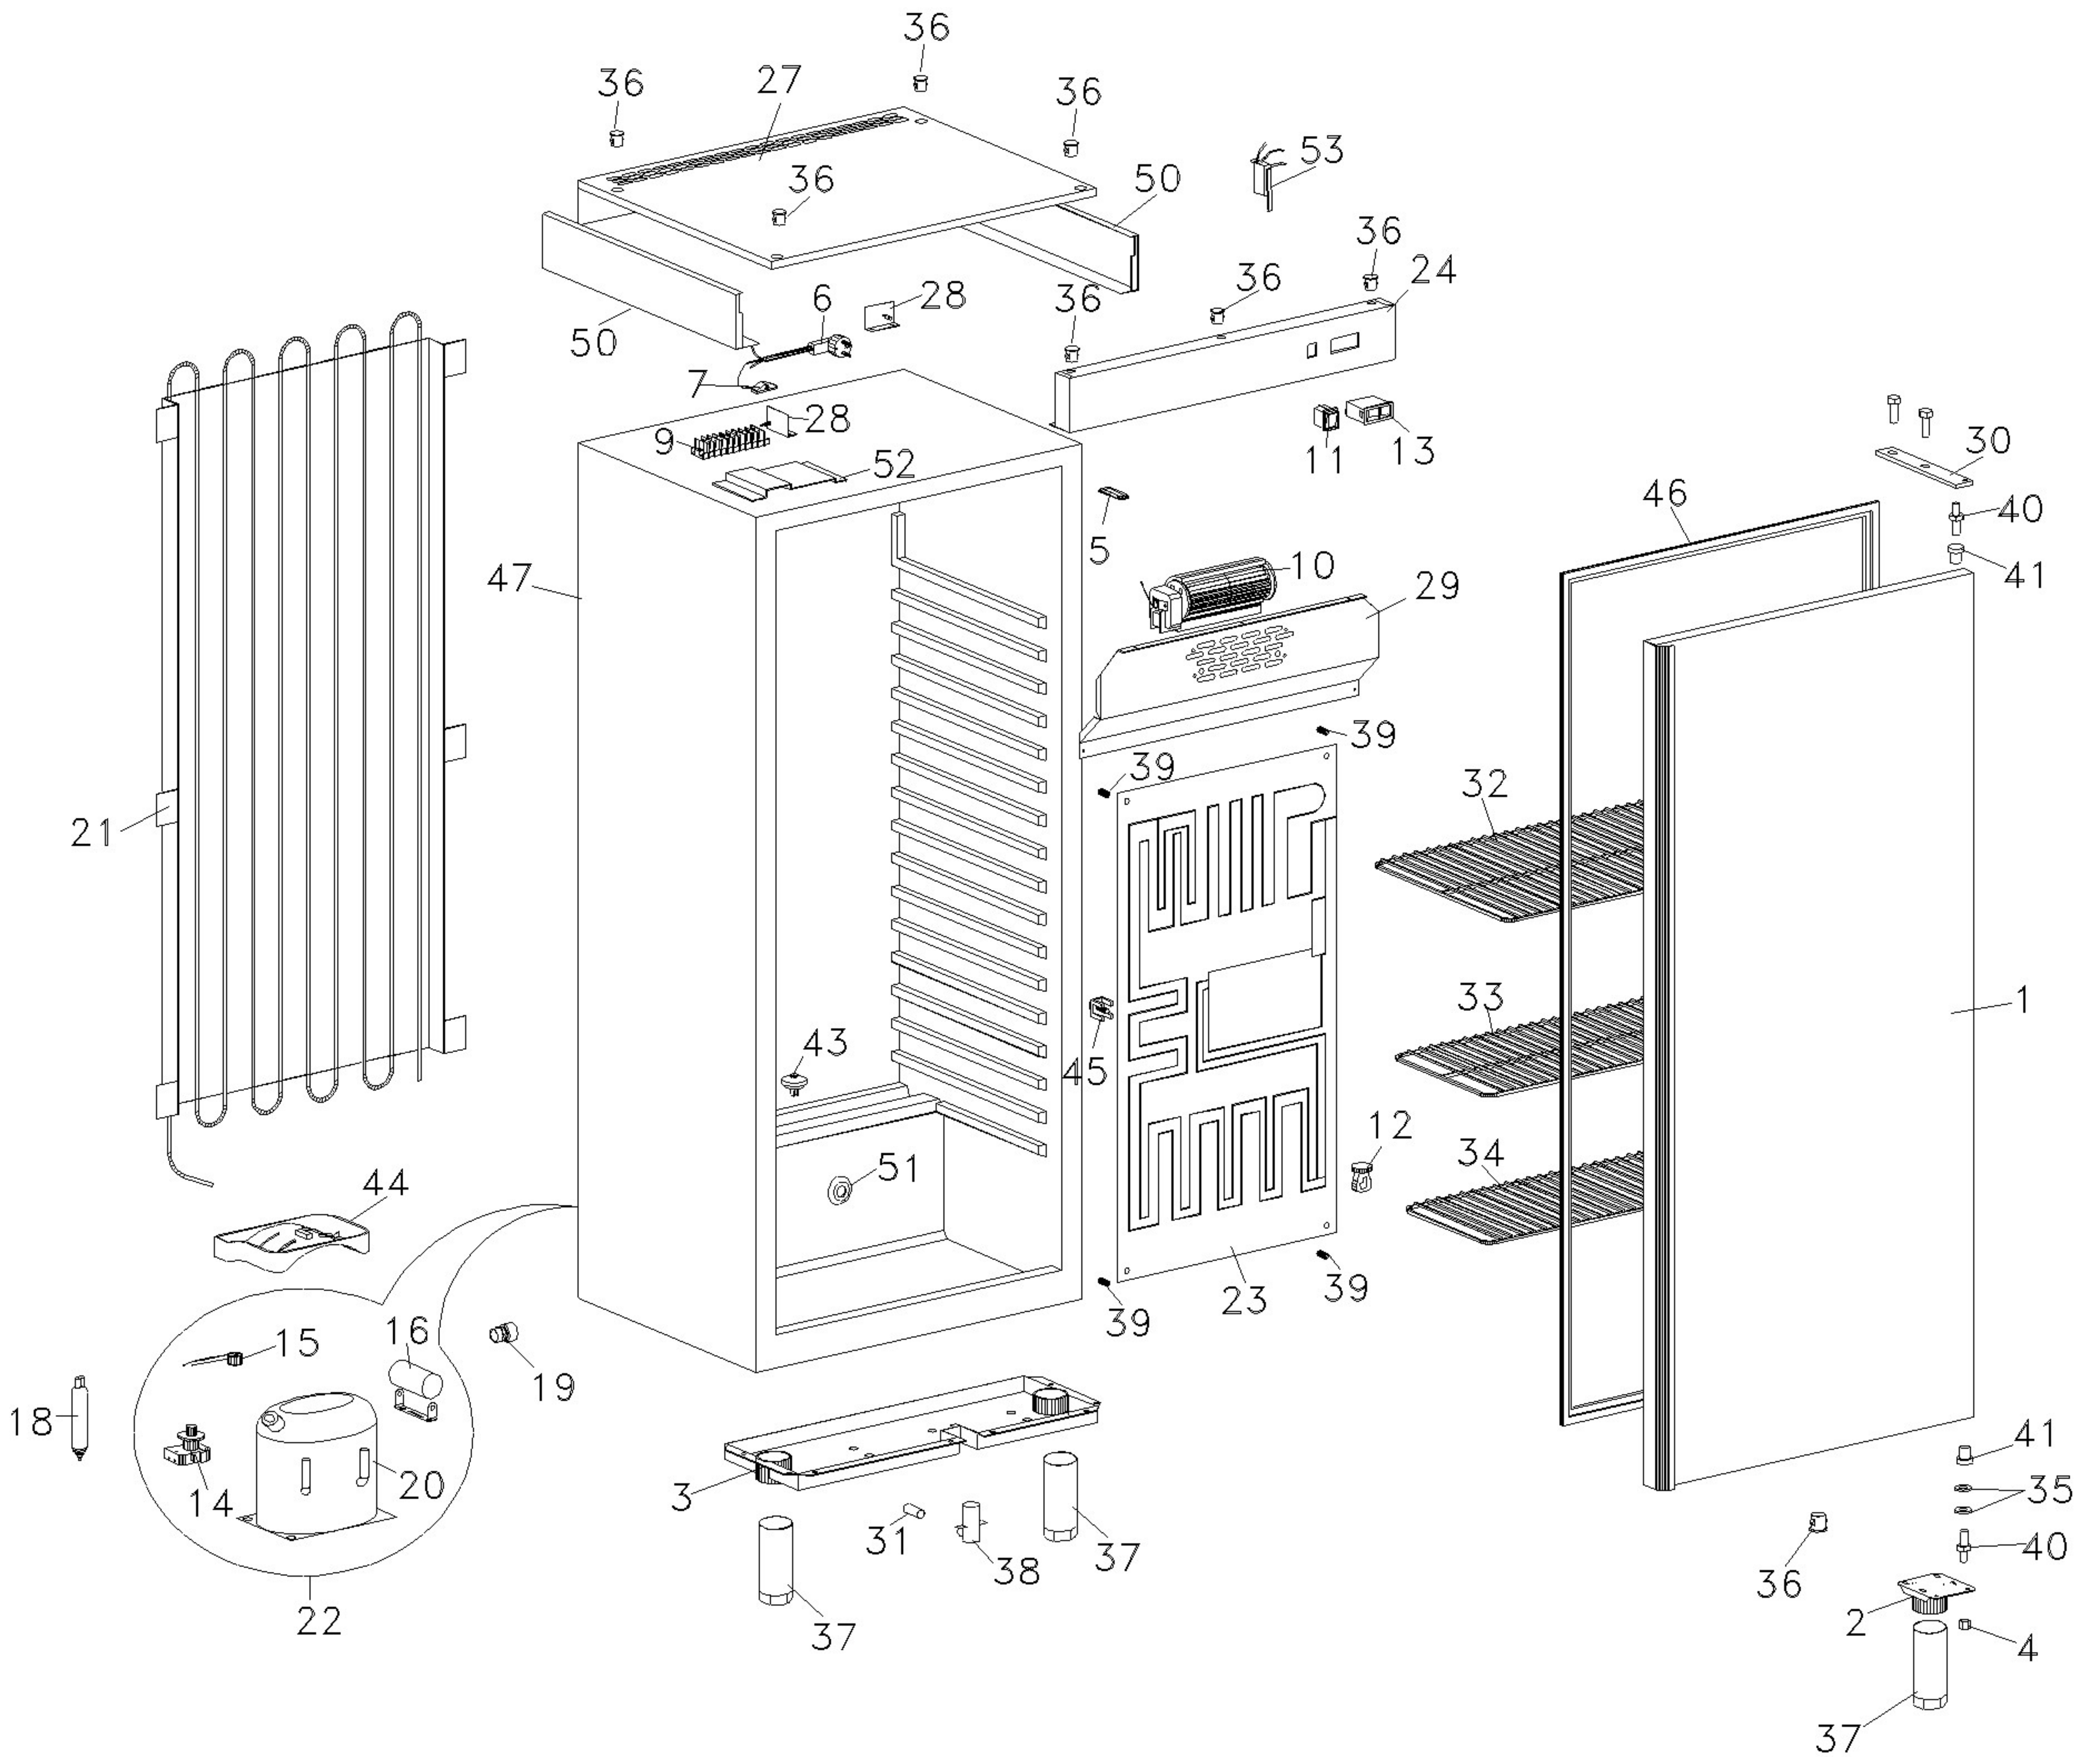

Pos	Code	Description	Info
001	30G3490	FRIDGE DOOR	11/10/1996-
002	3AT1170	FOOT-HOLDER	04/03/1997-
003	30W0080	TRAY ASS.Y	01/01/1996-
004	3113200	NUT	01/01/1996-
005	3178310	PLUG	01/01/1996-
006	32A2200	POWER SUPPLY CABLE	20/06/1997-
007	32D0020	CABLE CLAMP Ø 4 - 12	01/01/1996-
009	32D0750	TERMINAL BOARD	01/01/1996-
010	32M5920	TANGENTIAL FAN	23/11/1998-
011	32W2331	BIPOLAR SWITCH	01/01/1996-
012	32X0190	CABLE SUPPORT	01/01/1996-
013	32V7490	DIGITAL THERMOREGULATOR	10/02/2003-
014	32V1270	RELAY	22/04/1998-
015	32V1430	ENGINECUTOUT	22/04/1998-
016	32V1490	CONDENSER	22/04/1998-
018	33A0180	FILTER	01/01/1996-
019	33A1200	AUXIL.VALVE	01/01/1996-
020	34D6740	COMPRESSOR	22/04/1998-
021	34D1210	CONDENSER	01/01/1996-
023	34D4400	PLATE EVAP.	01/01/1996-
024	35H0900	FRONT PANNE	25/09/1999-
027	35G5720	COVER	21/02/1998-
028	35S5180	TERMINAL SUPPORT	01/01/1996-
029	35V6550	FAN GUARD	01/01/1996-
030	35V7760	TOP BRACKET	01/01/1996-
031	35X6980	GLASS COMP.CONNECTION	07/03/2007-
032	36A0131	HOSE GRID 60x40	09/06/1997-
033	36A0161	GRID 60x28	09/06/1997-
034	36A0471	GRID 54x25	09/06/1997-
035	36D2880	WASHER	01/01/1996-
036	36Q1660	CLAMP-ON	02/04/1999-
037	36D4000	ADJUSTABLE FOOT	01/01/1996-
038	36E2380	CONDENS. DRAIN	11/01/2001-
039	36D8800	SPACER	01/01/1996-
040	36G0440	DOOR PIN	01/01/1996-
041	36G2810	BEARING	01/01/1996-
043	36Q1200	PLUG	01/01/1996-
044	36Z0940	COND. TRAY	22/04/1998-
045	36Z0490	ENGINE CUTOUT	01/01/1996-
046	37Q0210	DOOR GASKET	01/01/1996-
047	40A0058	BODY	01/01/1996-
050	35G7790	MOTOR ROOM	19/02/1998-
051	36E0470	PLUG	19/02/1999-
052	35R3480	PANEL BOARD	14/04/1997-
053	32W1320	MICROSWITCH	01/01/1996-