




**40EVP**

**Edition 20080804-**

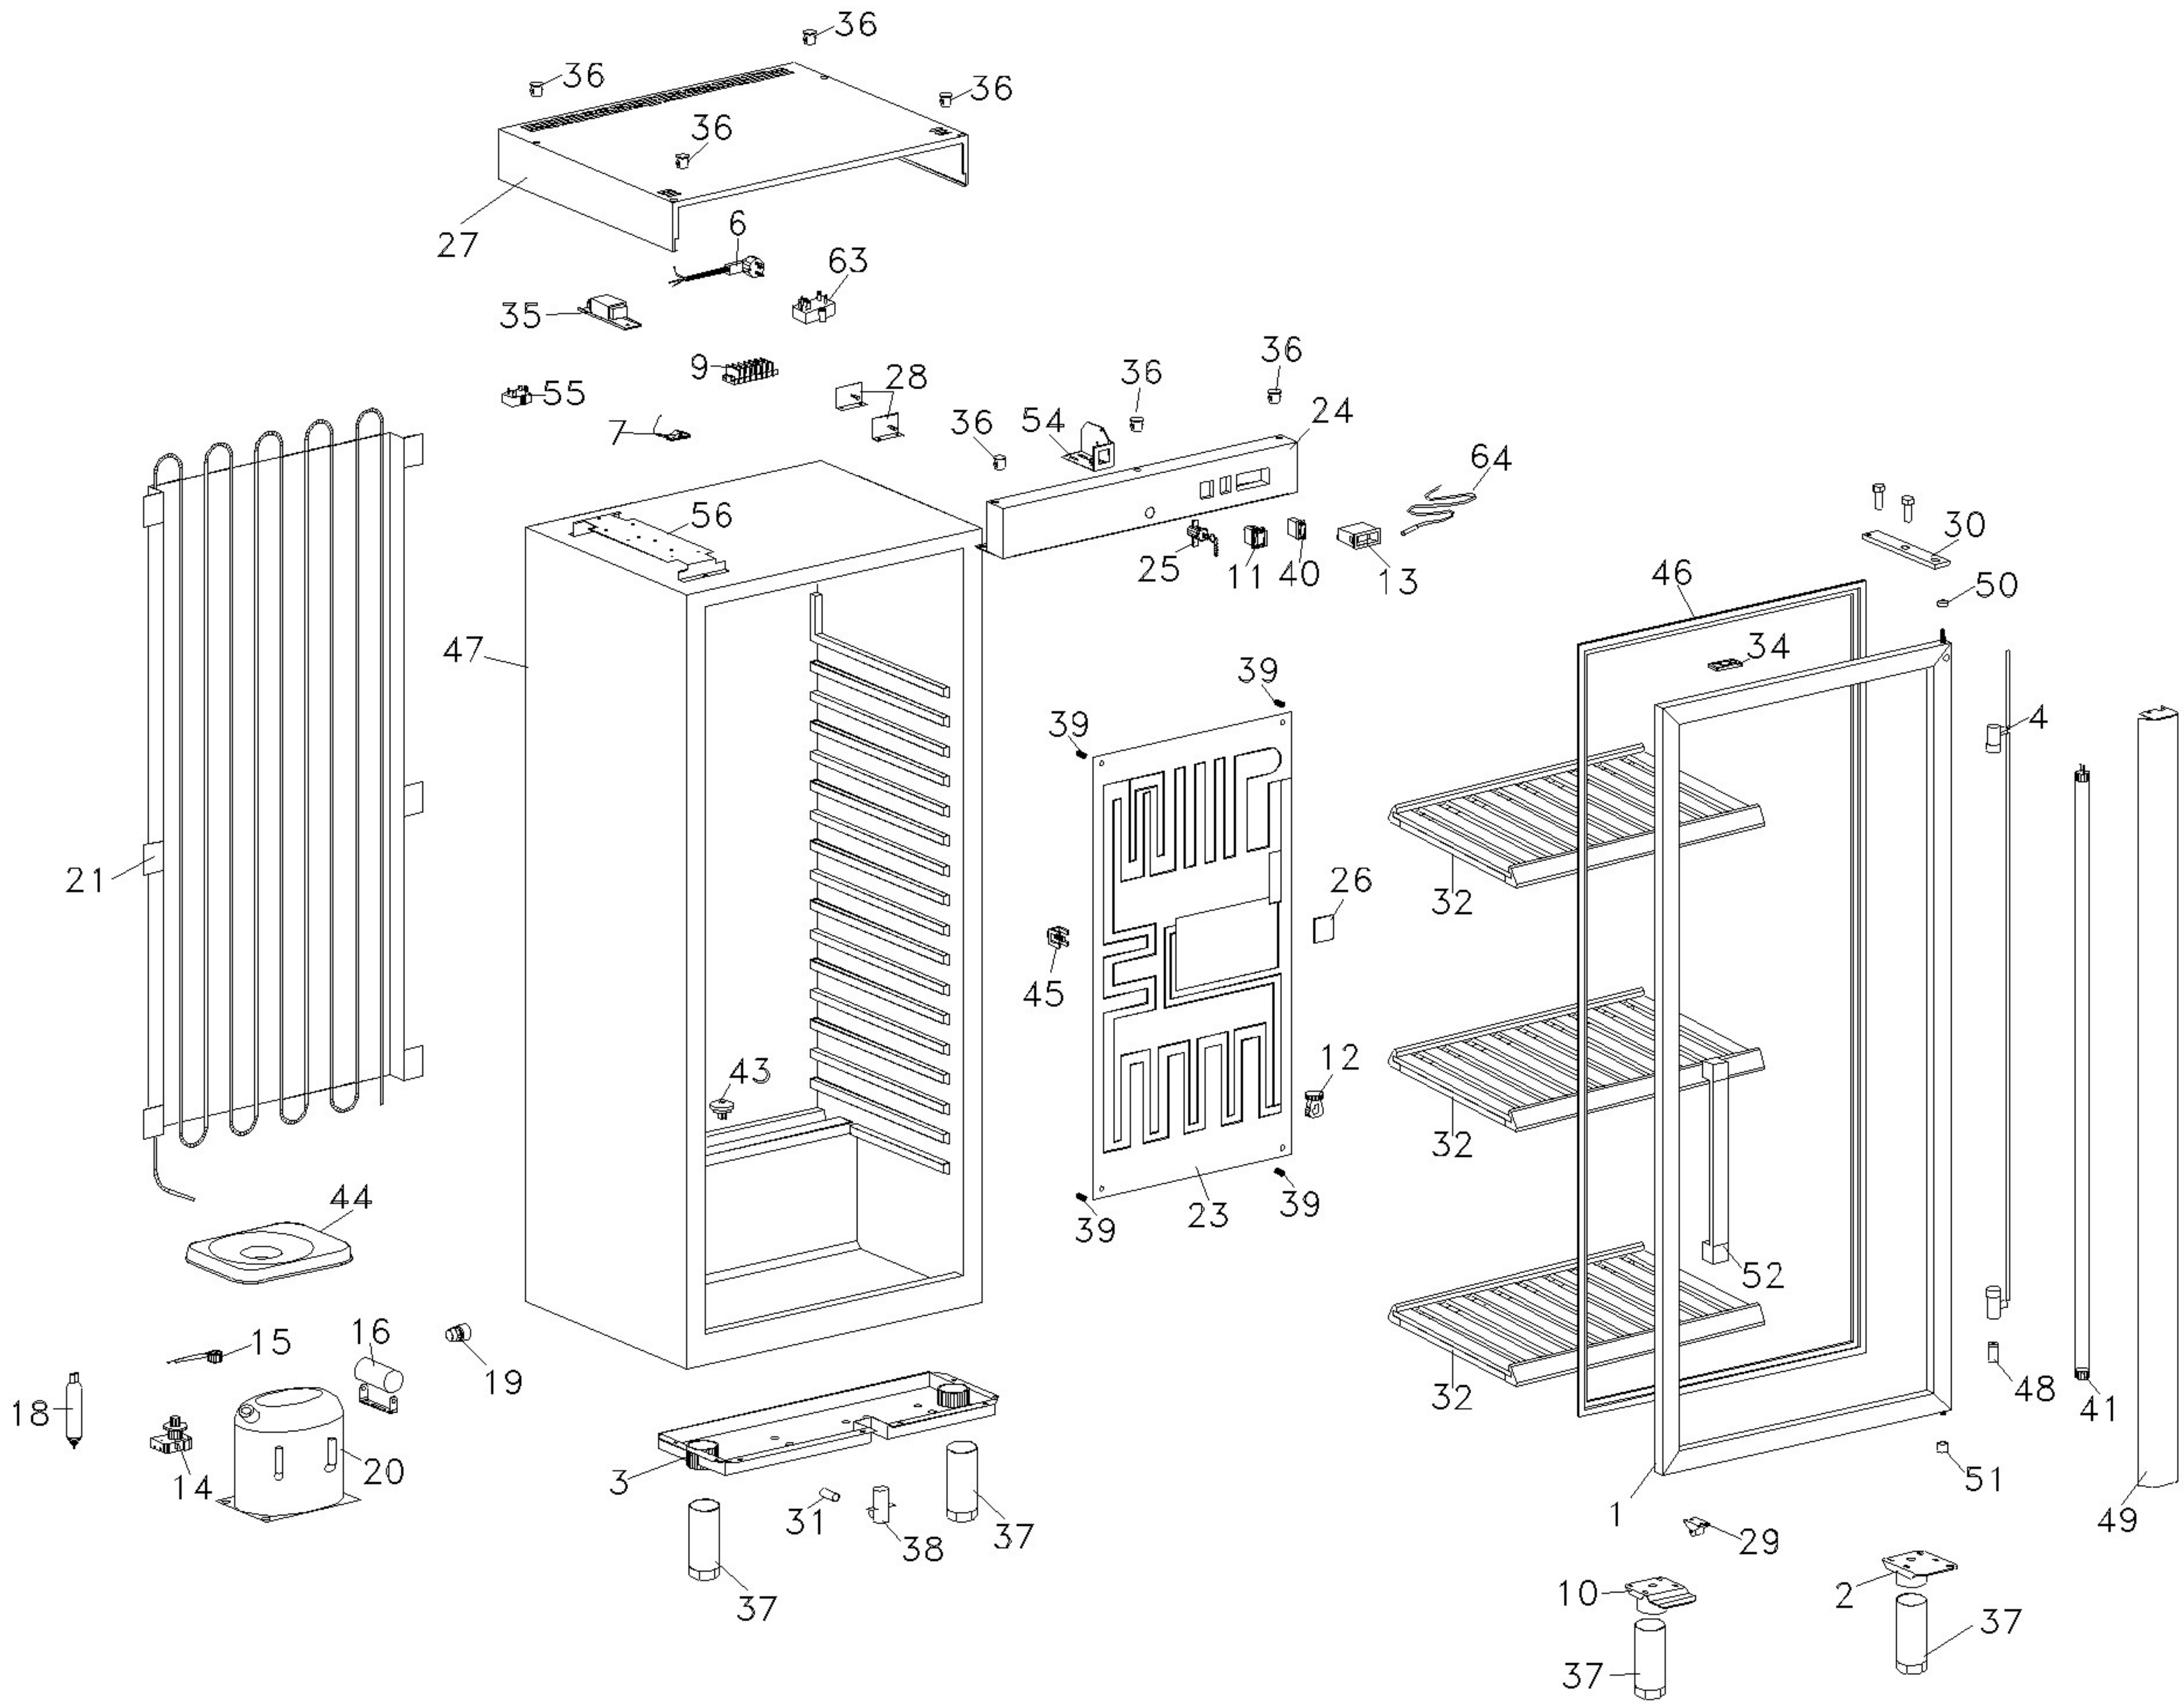

Pos	Code	Description	Info
001	30G0520	FRIDGE DOOR	15/05/1997-
002	3AT1110	FOOT-HOLDER	15/05/1997-
003	30W0080	TRAY ASS.Y	15/05/1997-
004	32A1840	POWER SUPPLY CABLE	15/05/1997-
006	32A2200	POWER SUPPLY CABLE	20/06/1997-
007	32D0020	CABLE CLAMP Ø 4 - 12	15/05/1997-
009	32D0740	TERMINAL BOARD	15/05/1997-
010	3AT1180	FOOT-HOLDER	15/05/1997-
011	32W2331	BIPOLAR SWITCH	15/05/1997-
012	32X0190	CABLE SUPPORT	15/05/1997-
013	32V7510	DIGITAL THERMOREGULATOR	11/02/2003-
014	32V1270	RELAY	22/04/1998-
015	32V1430	ENGINECUTOUT	22/04/1998-
016	32V1490	CONDENSER	22/04/1998-
018	33A0180	FILTER	15/05/1997-
019	33A1200	AUXIL.VALVE	15/05/1997-
020	34D6740	COMPRESSOR	22/04/1998-
021	34D1210	CONDENSER	15/05/1997-
023	34D4400	PLATE EVAP.	15/05/1997-
024	35H1330	FRONT PANNE	04/01/2000-
025	36M0140	KEY LOCK	15/05/1997-
026	36C2090	PLATE	15/05/1997-
027	35G1091	COVER	15/05/1997-
028	35S5180	TERMINAL SUPPORT	15/05/1997-
029	36G8270	ROLLER	15/05/1997-
030	35V8800	TOP BRACKET	15/05/1997-
031	35X6980	GLASS COMP.CONNECTION	07/03/2007-
032	3135660	HOSE FRAME	04/08/2008-
034	36D9480	LOCK BRACKET	15/05/1997-
035	32T2780	LAMP INDUCTOR	15/05/1997-
036	36D3820	PLUG	15/05/1997-
037	36D4000	ADJUSTABLE FOOT	15/05/1997-
038	36E2380	CONDENS. DRAIN	11/01/2001-
039	36D8800	SPACER	15/05/1997-
040	32W1471	SWITCH	15/05/1997-
041	32W3100	TLD NEON LIGHT	15/05/1997-
043	36Q1200	PLUG	15/05/1997-
044	36Z0940	COND. TRAY	22/04/1998-
045	36Z0490	ENGINE CUTOUT	15/05/1997-
046	37Q1370	DOOR GASKET	15/05/1997-
047	40A1582	BODY	15/05/1997-
048	32Z6060	TL LAMP STARTER	15/05/1997-
049	35Q8900	LAMP GUARD	15/05/1997-
050	35X3460	SPACER	15/05/1997-
051	36C2440	SPACER	15/05/1997-
052	36M4040	HANDLE	15/05/1997-
054	35C8170	LOCK SUPPORT	15/05/1997-
055	32Z8440	FILTER	15/05/1997-
056	35R1560	SUPPORT	04/01/2000-
062	32Q0530	CABLE ASS.Y	15/05/1997-
063	32Z8440	FILTER	13/11/2002-

<b>Pos</b>	<b>Code</b>	<b>Description</b>	<b>Info</b>
064	32V7730	POROBE NTC	21/05/2003-