



ART1L7

Edition 20041002-

Pos	Code	Description	Info
001	6013470	DOOR UNIT	15/06/2002-
002	30D6350	FRAME	15/06/2002-
003	30G4090	DOOR ASS. Y	15/06/2002-
004	30G4180	PLUG	15/06/2002-
005	30T2680	BOTTOM BRACKET	15/06/2002-
007	30W3920	TRAY X ASSEMBLY	15/06/2002-
008	32D0220	CABLE CLAMP Ø 16	15/06/2002-
009	32D0750	TERMINAL BOARD	15/06/2002-
010	32D1350	CABLE CLAMP	15/06/2002-
011	32M1550	FAN	15/06/2002-
012	32M6610	FAN	15/06/2002-
013	32M7020	FAN MOTOR	02/10/2004-
014	32V0150	TEMP. PROBE	15/06/2002-
015	32V0330	RELAY	15/06/2002-
016	32V0370	ENGINE CUTO	15/06/2002-
017	32V3720	RELAY	15/06/2002-
018	32V5160	CONDENSER	15/06/2002-
019	32V6470	ELECTRONIC CARD	15/06/2002-
020	32X0120	GROMMETØ 21	15/06/2002-
021	32Z9250	SWITCH	15/06/2002-
022	32Z9500	FUSE-HOLDER	15/06/2002-
023	32Z9520	FUSE	15/06/2002-
024	32Z9580	CONDENSER	15/06/2002-
025	32Z9710	CONDENSER	15/06/2002-
026	33A0330	FILTER	15/06/2002-
027	33A1200	AUXIL.VALVE	15/06/2002-
028	34D3260	CONDEN.+BAFFLE	15/06/2002-
029	34D5920	COMPRESSOR	15/06/2002-
030	34E0010	EVAPORATOR	05/09/2002-
031	34E0840	MOTOR UNIT	15/06/2002-
032	35P6260	COMPONENT GUARD	15/06/2002-
033	35R1500	SUPPORT	15/06/2002-
034	35R9990	GUIDE	15/06/2002-
035	35X1640	DRAIN TRAP	15/06/2002-
037	36C4010	RH RACK	15/06/2002-
038	36C4020	LH RACK	15/06/2002-
039	36C4670	FRAME TRIM	15/06/2002-
040	36C4680	FRAME TRIM	15/06/2002-
041	36C5080	FOOT	15/06/2002-
042	36C5000	TOP BRACKET	15/06/2002-
043	36E0340	SPACER	15/06/2002-
044	36E0350	CABLE CAMP	15/06/2002-
046	36E2380	CONDENS. DRAIN	15/06/2002-
047	36E2850	PROTECT GRID	15/06/2002-
048	36G9810	PIN	15/06/2002-
050	36Z0300	COND. TRAY	15/06/2002-
051	36Z0490	ENGINE CUTOUT	15/06/2002-
052	37N3860	SILK-SCREE.PANEL	15/06/2002-
053	37Q4490	GASKET	15/06/2002-
054	3AA4840	FRONT PANNEL	15/06/2002-
055	3AA4350	EVAP. GUARD	05/09/2002-

Pos	Code	Description	Info
056	35S6150	FAN SUPPORT	15/06/2002-
058	36G8660	BUSHING	05/11/2003-
059	35P6290	EVAPORATOR SUPPORT	05/09/2002-
060	35P3940	PROTECTION SUPPORT	05/09/2002-