

SM-120a SPIRAL MIXER PARTS LIST

Parts Number	Parts Code	Parts Name
SM120a001	16JCQCN25-1	Electromagnetic Contactor
SM120a002	16JCQCN18-1	Electromagnetic Contactor
SM120a003	16JCQCN11-1	Electromagnetic Contactor
SM120a004	16JDQJZX-18FF	Relay
SM120a005	16JDQJZX-18FF-1	Auxiliary Relay
SM120a006	16BXSZD	Fuse
SM120a007	16ZLQQS	Rectifier
SM120a008	16BYQJBK100-1	Transformer
SM120a009	16JDQ-H3B/A	Timing Relay
SM120a010	16DZP280101	Plate
SM120a011	16JDQRHN10A-2	Thermal Relay
SM120a012	16JDQRHN10A-3	Thermal Relay
SM120a013	16LSLCI-18	Mechanical-interlock
SM120a014	16JDQRHN10A-5	Thermal Relay
SM120a015	16JDQRHN80A2-1	Thermal Relay
SM120a016	14RB180-04	Drive Belt Wheel
SM120a017	15PDL1950	Belt
SM120a018	14M370-12T	Main Shaft
SM120a019	14RB265-01	Axes
SM120a020	16MBOMX-005	Control Panel(Two-Timer Model)
SM120a020-1	16MBLOMX-019-01	Control Panel(Three-Timer Model)
SM120a021	16MBOMX-005	Printed Circuit Board 1
SM120a022	16MBOMX-005	Printed Circuit Board 2
SM120a023	16KGLAR22PR-322B	Switch
SM120a024	16KGLBE101	Button
SM120a025	16KGLLE3-63	Power Switch
SM120a026	16KGLZA2-BS54	Emergency Switch
SM120a027	16KGLZA2-BS55	Emergency Switch
SM120a028	16KGLZA2-BS56	Emergency Switch
SM120a029	14RB220-02	Safety Cover Holder
SM120a030	14RB220-02	Safety Cover Holder
SM120a031	13RB210-02	Safety Cover
SM120a032	13M640-12T	Fixture Block
SM120a033	13RB215-02	Safety Cover
SM120a034	M620-12T	Bowl
SM120a035	Y605	Truckle
SM120a036	RB110-01	Handlebar
SM120a037	14M630-12T	Hook
SM120a038	M650-12T	Center Pillar
SM120a039	16MDL120TS-1	Top Motor
SM120a040	16MDL120aFX-1	Bottom Motor
SM120a041	11RB350-01	Oil Tank
SM120a042	15ZCL6304VV	Bearing
SM120a043	14M840-05	Assistant Wheel

SM120a044	15LZLZ4	Active Wheel
SM120a045	14RB175-04	Bearing Housing
SM120a046	14RB080-02	Shaft of Assistant Wheel
SM120a047	RB067-01	Adjusting Plate
SM120a048	14RB031-04	Friction Gear
SM120a049	13RB205-02	Guide Rod
SM120a050	15ZCL6205VV	Bearing
SM120a051	15ZCL32211	Bearing
SM120a052	15ZCL6310VV	Bearing
SM120a053	15ZCL6310VV	Bearing
SM120a054	15ZCL6210VV	Bearing
SM120a055	14RB195-04	Drive Shaft
SM120a056	14RB185-04	Friction-gear Of Drive Shaft
SM120a057	16TYF-200a	Preddure Regulating Valve
SM120a058	16JLF-200a	Throttle Valve
SM120a059	16YB-200a	Oil Gauge
SM120a060	16ZZF-200a	Needle Valve
SM120a061	15YYG-200a	Hydraulic Cylinder
SM120a062	16BP-200a	Motor
SM120a063	16DCF-200a	Electromagnetic Valve
SM120a064	16ZLF-200a	Check Valve
SM120a065	16ZTDXF-200a	Straight Rebound Valve
SM120a066	15GLQ-200a	Filter
SM120a067	15HPF3H3H0HM	Oil Pump
SM120a068	15HPF3H3H01M	Oil Pump
SM120a069	15HPB3T3HI	Pump Connector
SM120a070	15HPB3T3HL	Right-angle Connector
SM120a071	15HPB3T3TI	Straight Connector
SM120a072	15HPB4T3HL	Right-angle Connector
SM120a073	16YYMD-1	Hydraulic Motor
SM120a074	15MFQP9	O Ring
SM120a075	15MFQ50×3.1	O Ring
SM120a076	15MFUN40/50	O Ring
SM120a077	15MFQUN28/35.5	O Ring
SM120a078	15MFQDH28/36	O Ring
SM120a079	11RB310-02	Fixed Clasp
SM120a080	14RB345-01	Fixed Mandrel
SM120a081	RB310-01D	Axes
SM120a082	14V783-02	Tension Spring