

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
+ 1	SL0134		Pusher
2	SL0135		Hopper
3	SL2501		Housing
4	SL0983	ø8 - 1/4"	Cable clamp
5	SL1841	3Ph+Gnd	Electric cable
5	SL1671	1Ph+N+Gnd	Electric cable
+ 6	SL0106		Grip
7	SA1113		Lever press
8	SL3140		Washer
9	SL0108		Nut
10	SL3138		Covering
+ 11	SL0885		Microswitch
12	SL0258		Stud
13	SL2833		Cover
14	SL2573		Tap
15	SA1012	Assembly	Casing
16	SA2800		Roller
17	SL2537		Flange
18	SL1668	PG11	Cable clamp
19	SL0118	6205 2RS	Bearing
20	SL2535	Three-phase	Flange
20	SL2536	Single-phase	Flange
21	SL2539	Three-phase	Spacer
21	SL2538	Single-phase	Spacer
22	SL0121	ø5x10	Pin
23	SA1049	400V/3Ph/50Hz	Motor
23	SA1050	230V/1Ph/50Hz	Motor
24	SL0010	5x5x10	Key
25	SL2493	M16x1.5	Nut
+ 26	SL0807	Stop	Push button
+ 27	SA1083	Start-reverse	Push button
28	SL2311	25µF	Condenser

+ : ricambio consigliato / spare part suggested

Rif./Ref.	Codice/Code	Sigla /Features	Descrizione/Description
29	SL2504		Bottom
30	SL2357		Gear box
31	SL3457		Flange
32	SL2590	51205	Bearing
33	SL2317	6x6x60	Key
34	SL2529		Shaft
+ 35	SL0999		Electronic card
36	SL1610		Foot
37	SL0232	ø30xø52x10	Oil seal
38	SL2531		Flange
39	SL2547		Tap
+ 40	SL2924		Knob
41	SL2417	Stainless-steel	Sleeve
41	SL2523R0	Food stuff treated cast-iron	Sleeve
41	SL2544	Unger	Sleeve
+ 42	SA5500	Stainless-steel	Screw shaft
42	SA5400	Food stuff treated cast-iron	Screw shaft
42	SA5700	Unger	Screw shaft
43	SL0823		Pivot
43	SL0824	Unger	Pivot
+ 44	////////		Cutter
+ 45	////////		Plate
46	SL0197	Stainless-steel	Handwheel
46	SL3328R0	Aluminium	Handwheel
47	SL0247		Reversing gear
48	SA1119	Assembly - 15/05/05 f.p.(*)	Casing

